

Configuring Your Unit

Tap **Configuration**.




Select which item you want to configure using the tabs on the left.

Use the slider to adjust the screen brightness level.




Adjust the date and time according to your location.

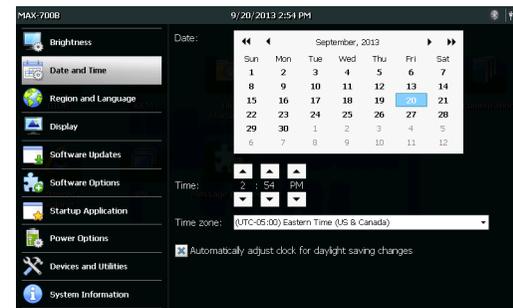

Select the language and regional settings fit for your situation.


Note: Some settings require to restart the unit (ex.: language, certain keyboard layouts).

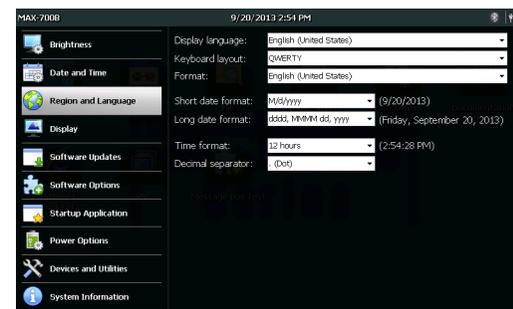

Once you are done, press the  button to return to the Home screen.

Transferring Files Using the Data Mover


1 Connect storage unit using one of the USB ports.

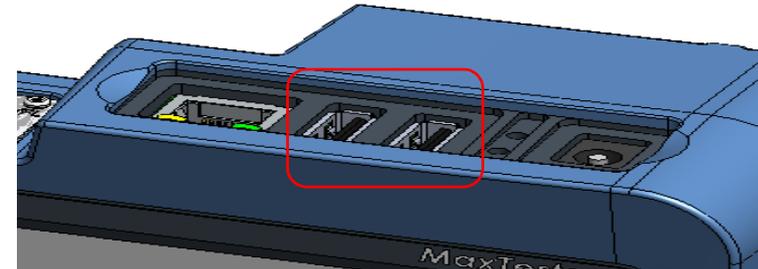

2 Tap **Data Mover**.



3 Adjust folder selection.

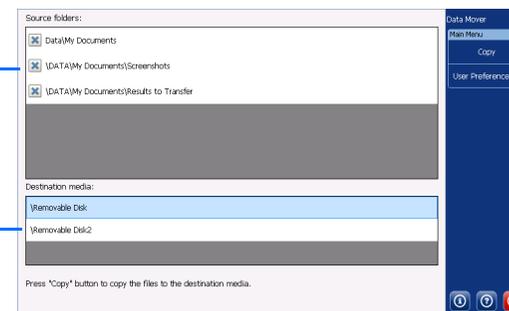

5 Tap **Copy**.

4 Select USB storage device.

MAXTESTER

Model:

Wavelength:

Operator:

Company:

Tel.:

[Quick Reference Guide](#)

Using Your Unit



To access the files and folders of the unit.

To start an application, tap the corresponding icon.

Tap to access the user documentation and license agreements.

Home Button

Press to switch to the Home screen. Press again to switch back to the last used application.

Hold down to take a screen capture or adjust brightness to medium or maximum level.

On/Off Button

- **To turn on the unit:** Press the button (the unit will beep once).
- **To enter the suspend mode:** Press the button (the backlight will turn off).
- **To exit the suspend mode:** Press the button.
- **To shut down the unit:** Press the button a few seconds until the unit beeps once.

Accessing Your Unit Remotely

- 1 Install TightVNC Viewer on a computer, and then connect the computer and your unit to a same network.

On your unit, tap VNC.



3 Write down unit's IP address.


5 Tap Start Server.



4 Tap **Server Configuration** to define connection settings.

- 6 From your computer, start TightVNC Viewer.

7 Enter the unit's IP address.

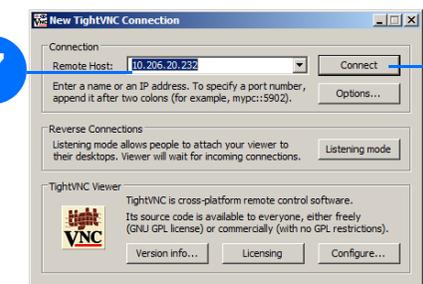

8 Click **Connect**.

For more information, refer to the user guide.