

Recalling Data

OLT Mode



- 1 Press and hold down to access the data recall menu.
- 2 Press to access the available OLT values. The OLT ID is displayed next to the Loc. indicator.



- 3 Press to select the OLT and switch to the ONT selection.
- 4 Press to access the available ONTs.



- 5 Press to select the ONT and display the recalled data.
- 6 Press to go through the data with the same OLT and ONT values.

Note: Press to exit the recall mode at any time.

Job Mode



- 1 Press and hold down to access the data recall menu.
- 2 Press to access to the available Job ID values.



- 3 Press to select the job.
- 4 Press to go through the data with the same Job ID values.

Note: Press to exit the recall mode at any time.

Deleting Data



- 1 Press and hold to enter Recall mode.
- 2 Select data to delete.
- 3 Press and hold to delete.
- 4 Press again to confirm or to cancel.

Keypad Quick Reference

PRESS: Activates/deactivates Pass/Fail mode (not possible during nulling, threshold verification, LEDs/LCD verification)

PRESS: For FTTx operation, accesses threshold selection mode; for OPM operation, selects the next wavelength in the list.

HOLD: Selects the FTTx or OPM mode

HOLD: For FTTx operation, displays the current threshold values.

PRESS: Turns unit on
Controls auto-off
Exits special modes

PRESS: Accesses the storage mode; in selection mode, selects the value.

HOLD: Turns unit off

HOLD: Accesses the data recall mode; in Recall mode, accesses the delete item function

PRESS: (available only for OPM) Switches between dBm and dB units

HOLD: Takes the input power as reference power

PRESS: In selection mode, goes to the next value; for OPM operation, goes to the next wavelength in the list


HOLD: If VFL option is present, changes the VFL state between OFF, ON CW and ON 1 Hz

© 2011 EXFO Inc. All rights reserved.
Printed in Canada (2011-07)
P/N: 1061638 Version: 2.0.0



Performing Loss Measurements (OPM Operation)

- 1 Inspect the fibers and clean them properly if necessary, then connect as shown.

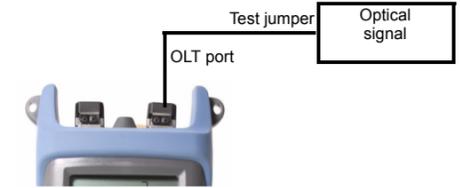

- 2 Press to turn unit on.
- 3 If necessary, press and hold to select the OPM mode.
- 4 If necessary, switch the units to dB.
- 5 Select appropriate wavelength.
- 6 Press and hold to perform a reference.

- 7 Loss is displayed. If desired, store data (see corresponding section for details).

For more information, refer to the user guide.



Selecting a Threshold Set (Pass/Fail Mode, FTTx Operation)

1 If necessary, press and hold to select the FTTx mode.

2 Press to enter the threshold selection menu.

3 Press **Threshold/λ** or **Next** to switch between available threshold sets.

4 If desired, display the Pass/Warning/Fail values associated with the current threshold set.
Note: You must return to threshold selection menu to select a threshold set.

4a Hold down **Threshold** a few seconds.

4b Press **Threshold/λ** or **Next** to switch to next wavelength.

4c Press **Power** to return to threshold selection menu.

5 Press **Threshold/λ** to select the displayed threshold set as the current one.


OR

Press **Power** to exit the threshold selection menu without selecting a new threshold set.

Note: You must install FastReporter on your computer and use the Handheld Data Transfer application to define new thresholds. For more information on threshold definition, refer to the Handheld Data Transfer online help.

Testing in Pass/Fail Mode (FTTx Operation)

1 Inspect the fibers and clean them properly if necessary, then connect as shown.

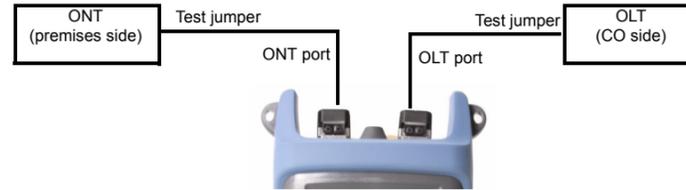

2 Press **Power** to turn unit on.

3 If necessary, press and hold to select the FTTx mode.

If LEDs are OFF, press **P/F mode**.
 LEDs
 ● : Pass
 ● : Warning
 ● : Fail

Storing Data OLT Mode

1 Press to access the data storage menu.

2 Press to access to the available OLT values.

3 Press to select the OLT and switch to the ONT selection.

4 Press to access the available ONTs.

5 Press to select the ONT and switch to the Loc ID selection.

6 Press to access the available Loc. IDs.

7 Press to select the location.

Note: Press **Power** to exit the storage mode at any time.

Job Mode

1 Press to access the storage menu.

2 Press to access the available Job ID values.

3 Press to select the job and switch to the Loc. ID selection.

5 Press to select the location.

4 Press access the available Loc. IDs.

Note: Press **Power** to exit the storage mode at any time.