


## Replacing the Battery

**1** Turn off the unit (shutdown) and disconnect it from AC power.


**2** Position the unit so that its front panel rests on a flat surface such as a table.

Using a flat screwdriver, turn the screws counterclockwise until the module is loose.

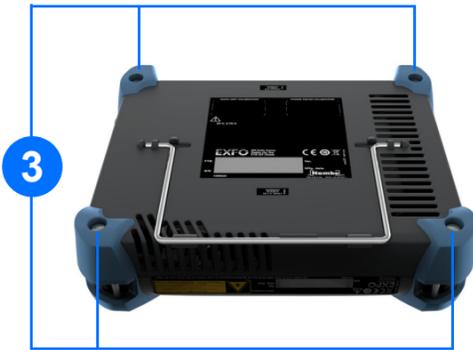


**4** While holding the front panel and the module firmly together, turn the unit over, and position it so that the module rests on a flat surface such as a table.

**5** Hold the front panel by its sides and pull it up.

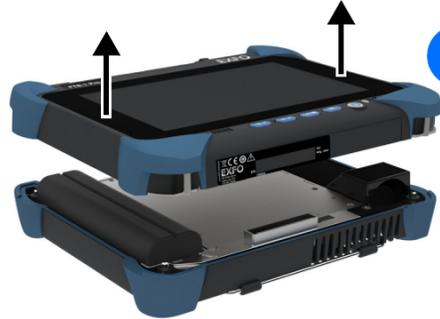


Pull on the battery's tab to free it from its socket.

**6**

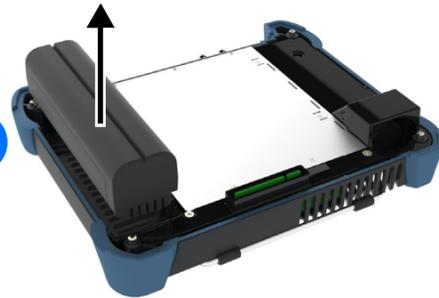


Slide in the new battery (poles facing down and pointing to the same side of the case as the mating connector).

**7**

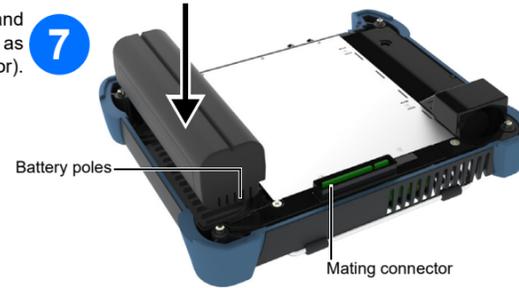

Connection slot for the module

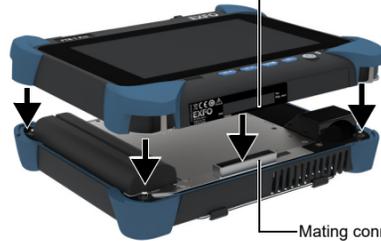

**8**

Place the front panel on the module making sure that the mating connector of the module is well aligned with the corresponding slot on the front panel.

**9**

While holding the front panel and the module firmly together, turn the unit over, and position it so that its front panel rests on a flat surface such as a table.

**10**

Using a flat screwdriver, turn the screws clockwise until they are tighten.

## Charging the Battery



Connect your unit to AC power with the provided AC adapter/charger.

### Battery status LED

Green: Fully charged  
Green, blinking: Charging  
Yellow: Battery level is low

© 2017 EXFO Inc. All rights reserved.  
Printed in Canada (2017-05)  
P/N: 1071546 Version: 2.0.0.1




**EXFO**  
EXPERTISE REACHING OUT

[Quick Reference Guide](#)

FTB-1v2 and FTB-1v2 Pro

## Accessing Connectors and Ports

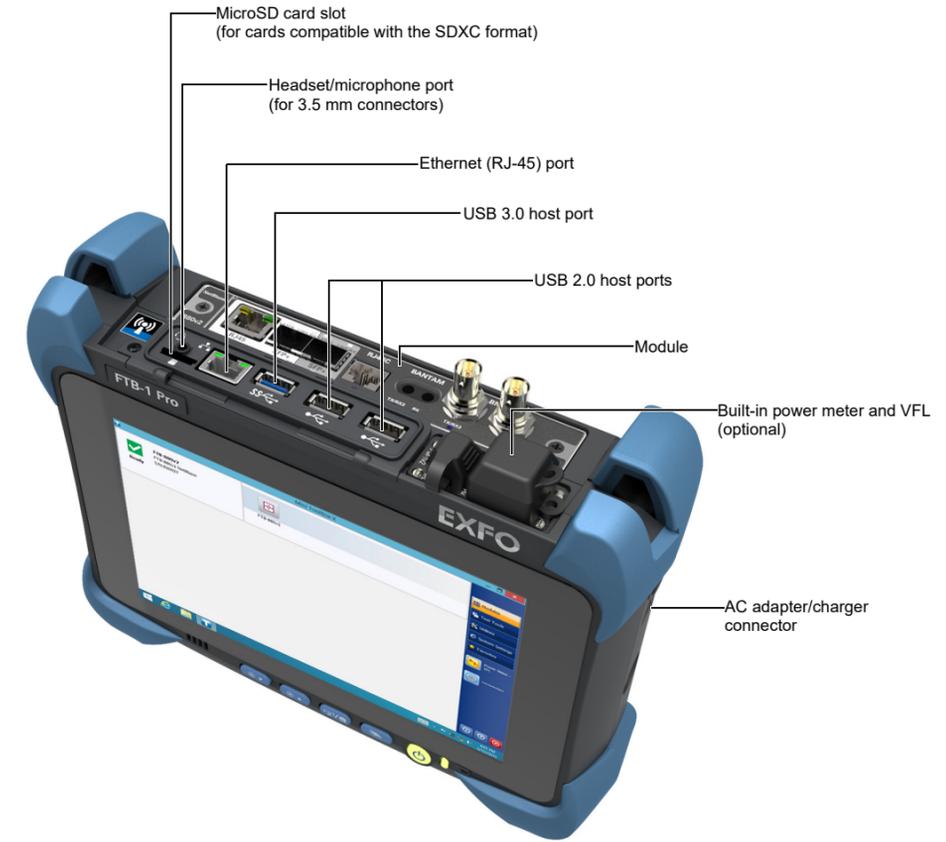

For more information, refer to the user guide.

**EXFO**  
EXPERTISE REACHING OUT

## Using Your Unit




## Attaching Modules



### WARNING

- To avoid electrical shock, always shut down the unit, and disconnect it from its external power source **BEFORE** removing a module.
- Never remove a module while the unit is turned on. This will result in immediate and irreparable damage to both the module and unit.

- 1 Position the module so that its back panel rests on a flat surface such as a table. The battery should be visible.
- 2 Place the front panel on the module making sure that the mating connector of the module is well aligned with the corresponding slot on the front panel.

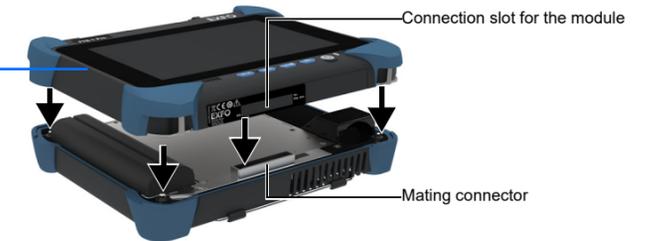

- 3 While holding the front panel and the module firmly together, turn the unit over, and position it so that its front panel rests on a flat surface such as a table.



- 4 Using a flat screwdriver, turn the screws clockwise until they are tightened.