

Inserting FTBx Modules



CAUTION

To avoid damaging your unit, use it only with modules approved by EXFO (refer to the unit's technical specifications).

- 1 Position the module vertically so that its connector pins are facing downwards and positioned to the left. The identification sticker should not be visible.
- 2 Insert the protruding edges of the module into the grooves and push all the way to the bottom of the slot.

Note: There is no need to turn off your unit before inserting a module.



- 3 Turn the two retaining screws clockwise to secure the module in place. Its faceplate should be flush with the front panel of the unit.



Removing Modules

- 1 From Mini Toolbox X, click the button.




CAUTION

Once you have pressed the button, wait until the status of the module switches to "Safe to Remove" in Mini Toolbox X.

- 2 Turn the two retaining screws counterclockwise until they are loose (do not remove them completely).



- 3 Hold the module by its sides or by the retaining screws (NOT by the connectors) and pull it out.

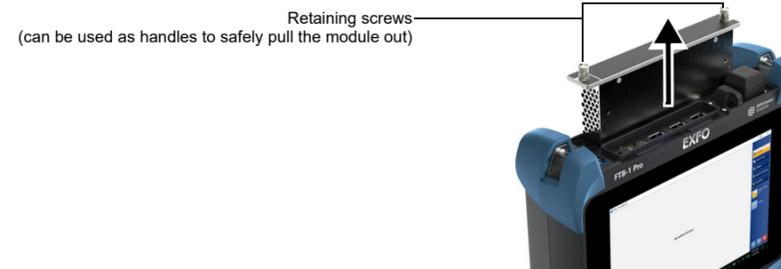

© 2018 EXFO Inc. All rights reserved.
 Printed in Canada (2018-05)
 P/N: 1073259 Version: 1.0.0.1

EXFO
 EXPERTISE REACHING OUT

Accessing Connectors and Ports



Note: The location of the security slot varies with the model of your unit.

For more information, refer to the user guide.

EXFO
 EXPERTISE REACHING OUT

Using Your Unit



Understanding the Module Statuses

-  **Ready**
The module is available for tests.
-  **In use**
The module is currently in use.
-  **Ejecting**
The module is being prepared for safe removal from the unit.
-  **Safe to remove**
The module can now be safely removed from the unit.
-  **Error**
The module cannot be used at this time because it had to protect itself from a critical problem.

Charging the Battery

