


## Installing an Adapter Head

**To install an adapter head:**

Slide the adapter head into the mating slotted channel, applying a slight downward pressure.

If you have the LFD-203 Live Fiber Detector model, be sure to place the adapter with the indexing notch facing the front of the unit.

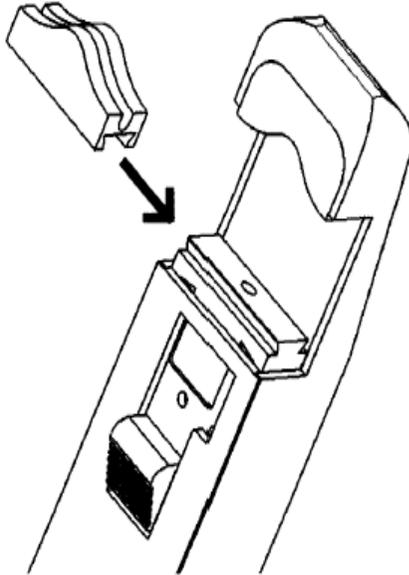

For more information,  
refer to the user guide.

# Selecting the Right Adapter Head for Your Fiber

The LFD-200 series works with adapter heads of different sizes to fit the fiber under test. For optimal results, EXFO strongly recommends to use the proper adapter head.

Fiber	Required Adapter Head	
3 mm jacketed fiber (pigtailed, jumpers) or loose tube fiber 		Interchangeable 3 mm head (LFD-200T3B – Included with LFD-200)
Ribbon fiber or 250 µm coated fiber 		Interchangeable 250 µm head (LFD-200T250B - Included with LFD-200)
900 µm buffered fiber 		Interchangeable 900 µm head (LFD-200T900B - Included with LFD-200)
1.6 mm jacketed fiber (pigtailed, jumpers) 		Interchangeable 1.6 mm head (LFD-200T-1.6B – Optional)
2 mm jacketed fiber (pigtailed, jumpers) 		Interchangeable 2 mm head (LFD-200T2B – Optional)